

Electric wheelchair

Model 1.614

en

Operating manual



MEYRA®
We move people.

Contents

Introduction	6
Indications	7
Specifications	7
List of models	7
Acceptance	7
Use	8
Adjustment	8
Life span	8
Overview	9
Model 1.614	9
Handling the electric wheelchair	10
Securing the electric wheelchair	10
Functional checks	10
Driving	10
Brakes	10
Service brake	10
Braking the wheelchair	10
Parking brake	10
Locking the brakes	11
Releasing the brakes	11
Drive-/push mode	12
Selecting the push mode	12
Selecting the motor mode	12
Selecting the operation	13
Pre-operation checks	15
Battery charging procedure	15
Positioning the operating module	16
Function description	16
Adjusting the distance to the padded arm support	16
Removing the operating module	16
Inserting the operating module	16
Swivelling the operating module	17
Height adjustment of the operating module	17

Leg supports	18
Calf belt	18
Removing the calf belt	18
Attaching the calf belt	18
Length adjustment of the calf belt	18
Lower leg support	19
Footplates	19
Footboard	19
Leg support upper part	20
Turning the leg supports to the side	20
Swivelling in the leg supports	21
Removing the leg supports	22
Attaching the leg supports	22
Mechanically height-adjustable leg supports	23
Lifting/lowering the leg support	23
Electrically height-adjustable leg support	24
Height adjustment	24
Arm supports	25
Removing the arm support	25
Inserting the arm support	25
Back support	26
Folding down the back support	26
Unfolding the back support	26
Adjusting the back support angle	26
Secure positions of the back support	27
Back support upholstery	28
Electrically adjustable back support	29
Folding down the electrically adjustable back support	29
Unfolding the back support	29
Secure positions of the back support	30
Seat	31
Seat pad	31
Seat inclination	31
Electrically adjusting the seat angle	32
Seat height adjustment	33

Retaining strap	34
Head support	35
Adjustment of the head support	35
USB connector socket	36
Attendant control with priority switch	37
Positioning the controller	37
Lighting	38
Rear-view mirror	38
Removing the rear-view mirror	38
Attaching the rear-view mirror	38
Adjusting the rear-view mirror	38
Loading and transportation	39
Loading	39
Transport of people inside a motor vehicle	39
Transport security	40
Maintenance	40
Maintenance	40
Maintenance schedule	41
Fuses	43
Replacing the fuses	43
Lighting	44
Headlights	44
Fault correction	45
Technical data	46
Kilometric performance	46
Hill climbing ability	46
Data according to ISO for model 1.614	47
Further technical data for model 1.614	48
Values acc. to ISO for model 1.614 XXL Code 3060-3063	50
Further technical data for model 1.614 XXL Code 3060-3063	51
Data according to ISO for model 1.614 with seatlift Code 27	53
Further technical data for model 1.614 Code 27	54
Meaning of the labels on the electric wheelchair	56
Meaning of the symbols on the washing instruction	57
Meaning of the symbols on the type plate	58

Inspection certificate	59
Warranty / Guarantee	60
Warrantee / Guarantee section	61
Inspection certificate for transfer	61
Notes	62

INTRODUCTION

We thank you for the confidence you have placed in our company by choosing an electric wheelchair from this series.

With all equipment and their accessories the electric wheelchair offers the respective adaptation to your disability.

Like any other vehicle, an electric wheelchair is a technical aid. It is subject to explanations, requires regular care and can cause danger when used improperly. The correct handling must therefore be learned. This operating manual is to help you get accustomed to the handling of the electric wheelchair as well as to prevent accidents.

Note:

Please note that the illustrated equipment variants can deviate from your model.

We have therefore also listed chapters with options that might not be applicable for your vehicle.

Important information

Attention:



Read and observe the following documentation belonging to the electric wheelchair before first use:


- this operating manual,
- the operating manual < *Operating module* > ,
- the safety and general handling instructions < *Electric vehicles* > .

Note:

Children and juveniles should read the documentation belonging to the electric wheelchair together with their parents respectively a supervisor or accompanying person before first use.

Users with visual impairments can find the PDF-files of above mentioned documents on our website under:

< www.meyra.com >.


 Contact your specialist dealer when required.

Alternatively users with visual impairments can have the documentation read out by a helper.

Additional information about our products can be found on our website:

< www.meyra.com >.

There in the < *Infozentrum* > you will also find information about products safety and possible recalls of our products.

 Contact your specialist dealer when required.

INDICATIONS

If the following indications occur we recommend the application of this mobility product:

- Walking disability resp. extremely limited walking ability as part of the basic need to move around in your own home.
- The need to be able to leave home for a short walk in fresh air or in order to reach the places, commonly in the perimeter of the home, required to fulfil basic needs.

SPECIFICATIONS

The electric wheelchair is an environment-friendly electric vehicle. It was developed to extend the mobility of persons with health-related or age-related restrictions.

- The model has been assigned the 'Use Class B' as per the EN12184 standard.

LIST OF MODELS

This operating manual applies to the following models:

Model 1.614

ACCEPTANCE

All products are checked for faults in the factory and packed in special boxes.

Note:

However, we request that you check the vehicle for possible transport damage immediately on receipt – preferably in the presence of the carrier.

- The packaging of the wheelchair should be stored for a further transport that might become necessary.

USE

The electric wheelchair, with attached leg supports and arm supports, serves exclusively for the conveyance of one sitting person. Other pulling or transporting uses do not comply with its intended purpose.

This model is an electric wheelchair especially for indoor and outdoor use on firm, level surfaces.

The electric wheelchair offers manifold adjustment possibilities to individual vital statistics.

The wheelchair should be adapted to your needs by a specialist dealer before the first use. The adaptation will take into account the driving experience, the physical limits of the user and the main place of use of the wheelchair.

Attention:

- ! Always have adaptation and adjustment work carried out by a specialist dealer.

In certain configurations your electric wheelchair might exceed the maximum dimensions of emergency routes.

- 🚗 Always make sure whether possible escape routes are wide enough for your electric wheelchair.

ADJUSTMENT

The specialist workshop will hand out the electric wheelchair to you under consideration of all relevant safety instructions, ready for operation and adjusted to your needs.

🗨️ Note:

We recommend a regular control if the wheelchair adjustment in order to ensure a long-term optimal provision

even with changing illness/handicap patterns of the user. Especially for children and juveniles an adjustment every 6 months is recommendable.

- 🗨️ We recommend regular medical exams in order to ensure safety for active participation in traffic.
- 🗨️ Retrospective adjustments should be carried out solely by the specialist dealer!

LIFE SPAN

We expect an average life span of about 5 years for this product, as far as the product is applied for its designated purpose and all maintenance and service guidelines.

The life span of your product depends upon the frequency of use, the application environment and care.

The implementation of spare parts can prolong the life span of the product. As a rule spare parts are available up to 5 years after production is discontinued.

- 🗨️ The indicated lifespan does not constitute additional guarantee.


OVERVIEW

Model 1.614

The overview shows the most important components and operating devices of the electric wheelchair.

Pos. Description

- (1) Back support
- (2) Arm support
- (3) Seat cushion
- (4) Leg support
- (5) Calf belt
- (6) Footplate
- (7) Steering wheel
- (8) Driving wheel
- (9) Pushing bar
- (10) Operating module
- (11) Front lighting
- (12) Selection lever drive-/push mode
- (13) Support castor
- (14) Battery case
- (15) Rear lighting
- (16) Type plate

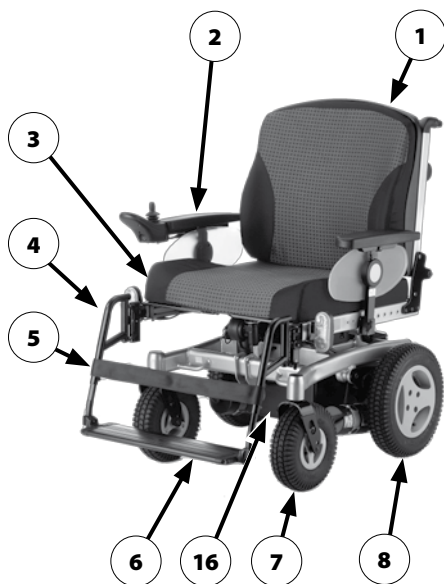

HANDLING THE ELECTRIC WHEELCHAIR

Securing the electric wheelchair

The electric wheelchair is to be secured as follows to prevent it from rolling off unintentionally:

1. Switch the selection lever for drive-/push mode up to drive mode on both sides.
2. Switch off the operating module.

Functional checks

The functions and safety of the electric wheelchair must be checked before the start of each journey.

- 🔊 For this observe chapter < *Inspections before starting to drive* > in the accompanying documentation.

Driving

You define the speed and direction yourself with the joystick movements (driving and steering lever) while driving as well as the preadjusted maximum final speed of your electric wheelchair.

BRAKES

Service brake

The motors work electrically as operating brake and carefully brake the electric wheelchair down without jerks to stillstand.

Braking the wheelchair

For allotted braking of the wheelchair slowly guide the joystick (steering and driving lever) back to the centre position (zero-setting).

- 🔊 The electric wheelchair stops in shortest distance after releasing the joysticks.

Parking brake

The parking brakes are only effective when the selection lever drive-/push mode is set to drive mode on both drives. They disengage automatically when the wheelchair starts off.

The parking brakes are manually disengaged by switching the selection lever drive-/push mode on both drives to push mode.

Locking the brakes

To engage the brakes swivel the selection lever drive-/push mode on both sides as far as possible into drive mode [1].

- ☞ Activation of the selection lever is intended for an accompanying person.

Attention:

- ! It should not be possible to push the electric wheelchair forward when the brakes are engaged.



Releasing the brakes

To loosen the brakes swivel the selection lever drive-/push mode on both sides down as far as possible into push mode [2].

- ☞ Activation of the selection lever is intended for an accompanying person.

Attention:

- ! Only transfer into or out of the electric wheelchair when the electric wheelchair is switched off and the selection lever drive-/push mode on both sides is in drive mode!
- An unintentional movement of the joysticks (driving and steering lever) can otherwise lead to an uncontrolled start of the electric wheelchair! – Danger of accident!



Drive-/push mode

Attention:

- ! Only switch the electric wheelchair to push mode when it is standing still for positioning or in case of emergencies, but not on slopes/hills.
- ☞ The electric magnetic brakes are switched off in the push mode.
 - A braking of the electric wheelchair is then only possible by switching to the drive mode.
- ☞ Grab hold of the push handle and back support in order to shunt the electric wheelchair.



Selecting the push mode

1. Switch off the operating module because the pushing will otherwise be made difficult by the electric system.
 - ☞ Therefore observe operation manual < Operating module >.
2. Disengage the brakes [1].
 - ☞ Therefore observe chapter *Releasing the brakes* on page 11.



The electric wheelchair can now be pushed.

Selecting the motor mode

1. Activate the brakes [2].
 - ☞ Therefore observe chapter *Locking the brakes* on page 11.
2. Switch the operating module on.
 - ☞ Therefore observe operation manual < Operating module >.

The electric wheelchair is now ready for use again.

SELECTING THE OPERATION


In order to obtain operational readiness of the electric wheelchair the following directions are to be carried out in the indicated order.

Note:


Charge the drive batteries via the operating module before the first journey.


1. Selecting the motor mode

Switch the drive motors to the drive mode [1]. – For this engage the brakes.

 Observe chapter *Locking the brakes* on page 11.


2. Check the correct fit of the battery/ mains fuse

 The blade fuse for the battery/main current has to sit tightly in the fuse holder (2).

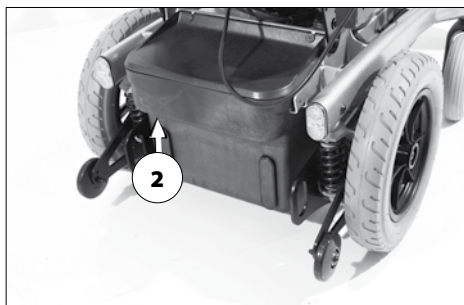

3. Position of the operating module

- ✎ The operating module should be positioned in such a way that you can comfortably and safely steer the electric wheelchair.
- ✎ The distance of the operating module to the padded arm supports can be adjusted after loosening the clamping screw (3).

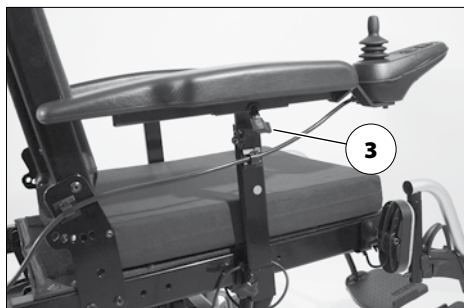

Attention:

- ! After the adjustment retighten the clamping screw.

- ✎ Therefore also observe chapter *Positioning the operating module* on page 16.

4. Switch the operating module on


- ✎ Press the On/Off-key (4) on the control panel of the operating module.
- ✎ Therefore observe operation manual *< Operating module >*.



Pre-operation checks

Before starting to drive, the following should be checked:


- ☞ the battery charging condition,
- ☞ the setting of the preselected final speed.
- For this observe the operating manual < *Operating module* >.

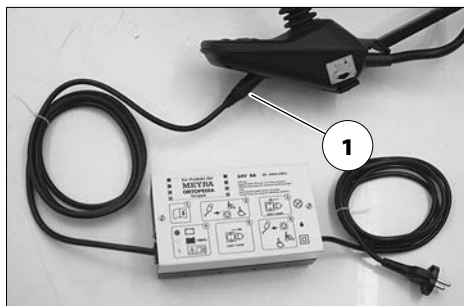

Battery charging procedure

- ☞ For the battery charging procedure also observe the operating manual of the battery charger.

1. Lock the electric wheelchair.
 - ☞ For this observe chapter *Securing the electric wheelchair* on page 10.
2. Insert the charger plug into the battery charging socket (1) of the operating module.

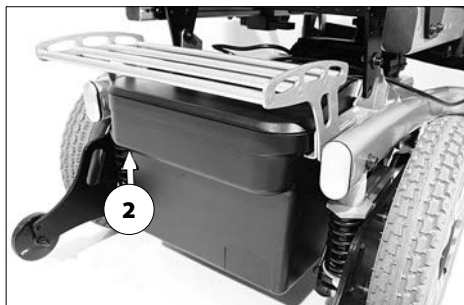

Attention:

- ! Do not insert any objects other than the battery charger plug into the battery charging socket.
 - Danger of short circuit!
3. Switch the battery charger on, resp. insert the main plug of the battery charger into the corresponding power socket.
 - ☞ The charging procedure is initiated.
 - ☞ The charging procedure only runs with an intact mains/battery fuse (2)!
 4. After a completed charging procedure disconnect the battery charger from the socket and remove the battery charging plug from the battery charging socket.

Positioning the operating module

Function description

You will find a detailed description of the keys and symbols in the operating manual for < Operating module >.

The position of the operating module can be adjusted to suit the individual size of the user. The operating module can also be removed for transportation or storage and can be laid on the seat or stored separately.

Attention:

! Switch off the operating module before adjusting/removing it.

Adjusting the distance to the padded arm support

Slacken the clamping screw distance adjustment (1). Afterwards slide the operating module into the desired position. In doing so carefully guide the cable and retighten the clamping screw (1) securely.

Removing the operating module

In order to remove the operating module loosen the clamping screw (1) and disconnect the plugged connection (2) (4).


⚠ Do not pull on the cable while doing so.

Afterwards pull out the operating module toward the front out of the arm support tube.

Inserting the operating module

For drive mode insert the operating module from the front into the arm support tube [3] and adjust the distance to the padded arm support.

⚠ Therefore observe chapter *Adjusting the distance to the padded arm support* on page 16.

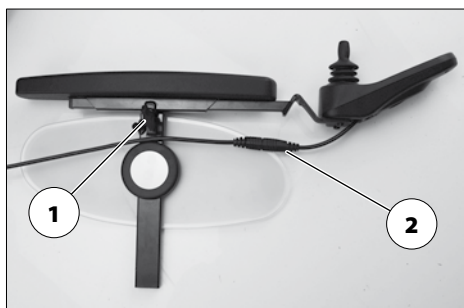

Afterwards re-establish the plugged connection (4) (2).

⚠ Check the function of the operating module.

Swivelling the operating module


With the optional swivel away operating module adapter [1] the operating module can be swivelled back to the side (2) so that it is located parallel to the arm support. This makes it possible, for example:

- to drive closer to a table,
- remove the operating module more easily.


For regular drive mode the operating module can be swivelled back toward the front until it engages back into the magnetic lock [1].

Note:

The power of the magnets (3) can be reduced, for example with tape on top of the magnets, for easier swivelling of the operating module.

-  Should the operating module be positioned too close to the arm support, move it forward before swivelling.


Attention:




-  Do not grab into the area of the cross brace. – Danger of squashing!

Height adjustment of the operating module

Loosen the clamping screw (4) to adjust the height of the operating module.

Attention:

-  After the adjustment retighten the clamping screw.

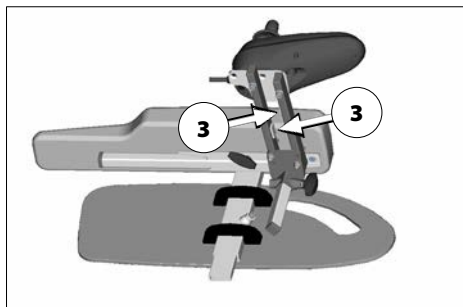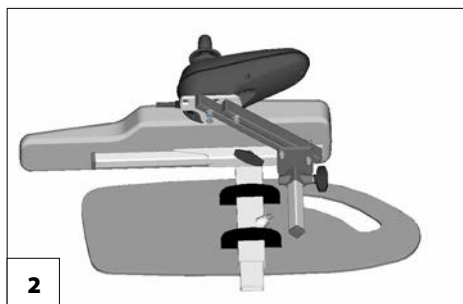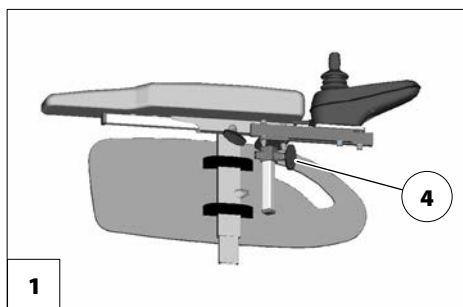

LEG SUPPORTS

Attention:

- ! Before any actions on the leg supports the wheelchair is to be secured against unintentional rolling motions.
- ☞ Therefore observe chapter *Securing the electric wheelchair* on page 10.

Calf belt

The removable calf belt (1) prevents the feet from sliding off the back of the footplates.

Attention:

- ! Do not drive without the calf belt.
– Danger of accident!

☞ Note:

The calf belt must be removed in order to swivel away the leg supports.

- ☞ The calf belt is omitted for height adjustable leg supports and is replaced by a calf pad.



Removing the calf belt

The calf belt is removed by opening the velcro fasteners.

Attaching the calf belt

For attachment the calf belt is placed around the leg support tubes and closed with the velcro fasteners [2].

Length adjustment of the calf belt

For length adjustment the calf belt is adjusted in corresponding length with help of the velcro fastener.

Lower leg support

The footplates, resp. footboard needs to be folded up before entry or exit [1].

- ☞ Check the locking points!
- Remove both feet from the footplates.
- Remove the calf belt (2), if present.
- ☞ Therefore observe chapter *Calf belt* on page 18.
- ☞ Before starting to drive the footplates resp. footboard need to be folded back down [3] and the calf belt attached.

Footplates

The footplates can be folded outward and up resp. inward and down.

Footboard


Fold the footboard up before swivelling away and removing the upper leg support [1].

Folding up the footboard

In order to fold up the footboard lift the loose end of the footboard (4) as far as possible.

Folding the footboard down

In order to fold down the footboard, lower the loose end of the footboard as far as possible down onto the footboard bracket [5].

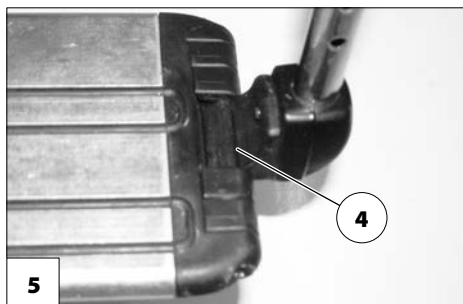

Leg support upper part


The upper leg support with an inserted lower leg support is termed leg support.

Turning the leg supports to the side


For easy transfer out of/into the electric wheelchair as well as driving closer to a closet, bed or bathtub the leg supports can be swivelled outward [1].

Note:


Remove the calf belt before swivelling away the leg supports.

-  Therefore observe chapter *Calf belt* on page 18.

Attention:

-  Leg supports turned to the side are released automatically and can easily come off. Note this when handling (e.g. transport).

- Fold up the footplates resp. footboard in order to swivel away the leg supports.

 Therefore observe chapter *Lower leg support* on page 19.

- Afterwards press the respective locking lever down (2) and swivel the corresponding leg support outward.




Swivelling in the leg supports

For inward swivelling, let the leg supports swivel forward until the lock audibly engages [1].

Note:

After audibly swivelling the leg supports inward check the respective locking device.

-  Afterwards observe chapter *Lower leg support* on page 19.





Removing the leg supports

For easy transfer into and out of the electric wheelchair as well as a reduced wheelchair length (important for transport) the leg supports can be removed [1].

Note:

Remove the calf belt before swivelling away the leg supports.

 Therefore observe chapter *Calf belt* on page 18.

- For removal first swivel the leg support sideways and then remove them toward the top [1].
 Therefore observe chapter *Turning the leg supports to the side* on page 20.
-  Watch for possible danger of jamming!


Attaching the leg supports

- For attachment, hook the leg support, swivelled to the side, onto the pins (2).

Note:

After attachment swivel the leg supports inward [3].


 Therefore observe chapter *Swivelling in the leg supports* on page 21.

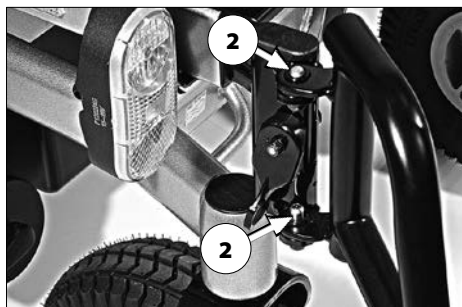

Mechanically height-adjustable leg supports

Attention:

- ! Never put the free hand into the adjustment mechanism while adjusting the height adjustable leg support. – Danger of jamming!
- Have the leg support that is to be adjusted secured against falling away by an accompanying person.

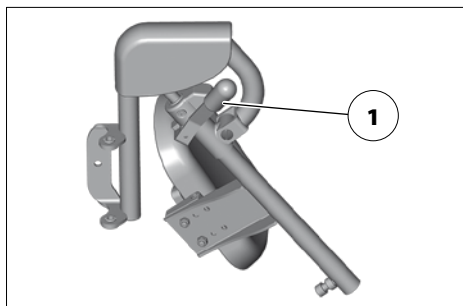

Lifting/lowering the leg support

1. Before lifting/lowering relieve the leg support by an accompanying person by slightly lifting it up.
2. Afterwards press the clamping lever (1) down and have the leg support lifted/lowered slowly to the desired level by an accompanying person.

Attention:

- ! Do not let the leg support drop on its own weight. – Danger of injury!
3. After the adjustment let go of the clamping lever (1).

Electrically height-adjustable leg support

Electric contact is automatically established when attaching the electrically height adjustable leg support [1].

Attention:

- ! Never put the free hand into the adjustment mechanism while adjusting the height adjustable leg support. – Danger of jamming!

Height adjustment

–For height adjustment, raise or lower the leg support to the desired height via the operating module.

- 📖 Therefore observe operation manual < *Operating module* >.

Attention:

- ! Observe the safety and general handling instructions < *Electronic vehicles* >!



ARM SUPPORTS

Attention:


- ! Do not use the arm supports [1] to lift or carry the electric wheelchair.
- Do not drive without the arm supports!

Removing the arm support

To remove the arm support, loosen the clamping screw (2) first and then pull out the arm support toward the top .

Note:

The operating module (4) must be removed first if the arm support on the control side is to be removed.


 Therefore observe chapter *Removing the operating module* on page 16.

Inserting the arm support

For inserting the arm support, first slide the arm support as far as possible into the bracket (3) and then tighten the clamping screw (2).

Note:

For inserting the operating module (4) observe chapter *Inserting the operating module* on page 16.

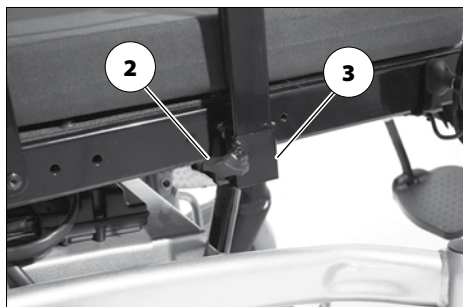


BACK SUPPORT

The back support can be folded down for storage or transport.

Note:

For better demonstration of the wire cable (1) the back support is shown without cushion.

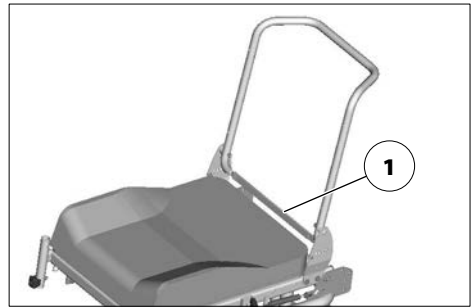

Folding down the back support

- If required remove the seat pad (velcro fastener).
- Disengage the back support by pulling or pressing the wire cable (1) at its centre and fold it onto the seat [2].


Unfolding the back support

- For this raise the back support and pull the pressure bolts inward by pulling or pressing on the wire cable (1).
- Release the wire cable in order to lock the back support in the desired position (3). – Slide the back support until the pressure bolts audibly click into place.
- If required replace the seat pad.

Note:

The greasing of the thrust bolts is recommended for an easier latching of the backrest.

-  Check the lock of the back support.

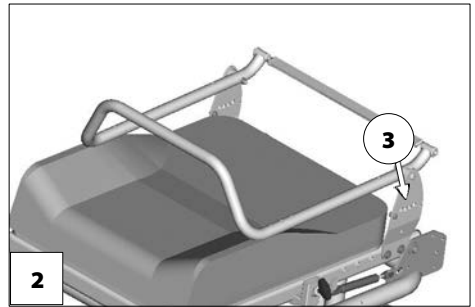

-  Check the lock of the back support.

Adjusting the back support angle

- Unlock the back support by pulling or pressing the centre of the wire cable (1).
- Release the wire cable in order to lock the back support in the desired position (3). – Slide the back support until the pressure bolts audibly click into place.


Secure positions of the back support

The diverse possible seat adjustments also includes such settings, that may only be used as resting positions, since they might lead to instable driving conditions in drive mode.

Depending on the set seat inclination you may only select certain back support adjustments for driving on hills [1].

Note: For your safety you should have the set seat inclination confirmed by your specialist dealer and marked in the chart!

Attention: Any change to the seat inclination will lead to different safe back support adjustments!

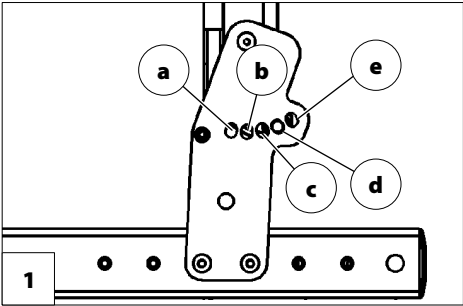


Example:
Adjusted seat inclination:.....6°
The pressure bolt of the back support may only be in positions c, d, or e when driving on hills/slopes.

Table: Safe seat inclination

Seat inclination	Adjusted seat inclination	safe position of the back support inclination [1]
0°		c, d
2°		c, d
4°	manufacturer setting	c, d
6°		c, d, e
8°		d, e
10°		d, e

Back support upholstery

The back support upholstery is secured to the back support shell with Velcro fasteners and can be pulled off [1].

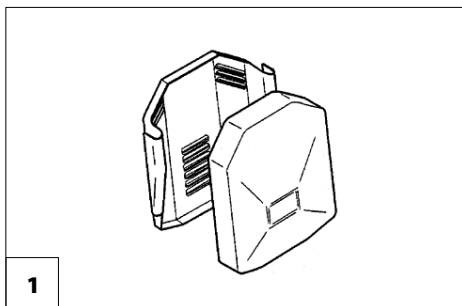


Electrically adjustable back support

The back support [1] is electrically adjustable.

Note:


Herefore view the operating manual
< *Operating module* >.

Attention:


 Only adjust the back support when the electric wheelchair is standing on a level surface. A danger of tipping over exists on gradients!

Folding down the electrically adjustable back support

Fold open the safety latch (3) first for folding over the electrically adjustable back support [2], then remove the pin (4).


 Keep the back support and motor in position with one hand at the push bar.


Afterwards place the motor onto the lower rack and fold the back support forward [2].


 Reinsert the pin (4) in order to prevent loss.

Unfolding the back support

After raising the back support [1] remove the pin (4), lift the motor and hang it into place. The reinsert the pin (4) and fold the safety bracket close [5].

 Check the locking device after raising the back support up and reinserting the pin.

 Keep the pin clean at all times for flawless function.

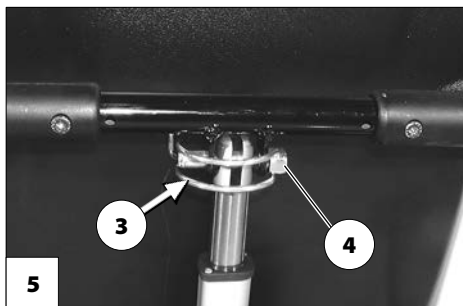


Secure positions of the back support

The diverse possible seat adjustments also includes such settings, that may only be used as resting positions, since they might lead to instable driving conditions in drive mode.


The electric wheelchair is equipped with a tilting switch, that limits the back support angle in combination with the seat angle.

Note:

The maximum back support adjustment is only possible with a seat angle of 0°.

-  If the safe angle, even while driving, is exceeded the wheelchair automatically brakes to a stop and a < *peep* > will sound at every movement of the joystick. Continuing to drive is only possible when the back support, resp. seat angle is reduced.

Attention:

-  Any change to the seat inclination will lead to different safe maximum back support adjustments!

SEAT

Seat pad

The seat pad [1] is attached to the seat plate with velcro straps and can be removed for cleaning and maintenance.

Replace and attach the seat pad again after cleaning or maintenance [1]. – Velcro fastener.



Seat inclination

Attention:

- ! Only adjust the seat angle [2] when the electric wheelchair is standing on a horizontal, level surface. A danger of tipping over exists on gradients!
- The seat-angle adjustment is not linked with an automatic speed reduction function.
- An increased danger of tipping over exists with a reclined back support.
- Before driving make sure that you have not adjusted a negative seat inclination, resp. that the seat inclination ensures a safe sitting position even while driving on hills/slopes.



Electrically adjusting the seat angle




The seat inclination [1] is administrated through the operating module or a separate adjustment module.

Note:



Therefore observe operation manual < *Operating module* >.

Rising aid

The seat is angled forward for the stand-up aid [2] (negative seat inclination).

-  The negative seat inclination setting serves as support for getting up when the vehicle is standing.
-  When tilting the seat surface forward (rising aid) the steering wheels must face toward the back or one side, because otherwise the footplates will hit against the steering wheels.
-  Adjustment of a negative seat inclination may lead to contact of the lower leg supports with the ground and to a lifting on the steering wheels.

Attention:

-  Before using the rising aid, secure the electric wheelchair and fold up the footplates.
-  Therefore observe chapter *Securing the electric wheelchair* on page 10.



Seat height adjustment

The seat height [1] can be adjusted through the operating module.

- This continuously increases the seat height by up to 300 mm.
 - For this observe chapter *Technical data* on page 46.
- Therefore observe operation manual < *Operating module* >.
- If the seat is moved upward by more than 20 mm from the basic position, the speed is limited to km/h and the acceleration damped.
 - For this observe chapter *Technical data* on page 46.
- The limitations to speed and acceleration are automatically reset as soon as the seat reaches the initial position..

Negative activation:

With negative activation through the operating module the seat returns to the basic position.

- The limitation to speed and acceleration are cancelled.



RETAINING STRAP

The retaining strap serves to strap in a person sitting in the electric wheelchair.

- Additional stabilisation of the sitting position.
- Prevents the user from sliding forwards out of the electric wheelchair.
- Continuous adjustment to suit the user's needs.

Attention:


- ! Make sure that no objects are trapped between belt and the body! – Thus you avoid painful pressure points.

The retaining strap is screwed on, from the outer side, at the respective back support holder (1).

- ⚠ The retrospective assembly of a retaining strap is only to be carried out by a specialist workshop!

Attention:

- ! The retaining strap is not part of the retaining system for the electric wheelchair and/or the driver during transport in motor vehicles.

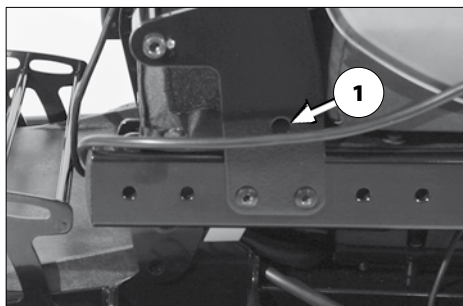

HEAD SUPPORT

The head support is swivel/proof, height- and depth adjustable and removable.

Attention:


- ! We recommend the fitting of two rear-view mirrors for driving with a head support.

Adjustment of the head support

The head support can be detached or adjusted in height after the clamping lever (1) has been slackened.

Attention:

- ! The maximum height adjustment is indicated by the marking!

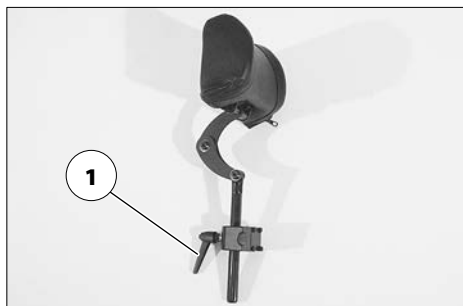

USB CONNECTOR SOCKET

The USB connector socket serves to connect devices with a USB plug type A.

Attention:

- ! The maximum power consumption may not exceed 1 A per connection.
- 🔌 The USB connector socket requires a permanent power supply. This may require a more frequent recharging of the batteries.

To connect devices, first pull of the clothes guard [1], then insert the USB plug.

If the USB connector socket is not used, close it with the splash protection cap [2].



ATTENDANT CONTROL WITH PRIORITY SWITCH

The control unit for accompanying person enables the accompanying person an easy control of the electric wheelchair with auxiliary operating module.

Positioning the controller

Note:

Switch off the operating module before position adjustment! – This prevents an unwanted movement of the electric wheelchair.

Height adjustment



Hold the operating module and then slacken the clamping screw (1).

Move the operating module into the desired position and retighten the clamping screw.

Angle adjustment

Hold the operating module and then slacken the clamping screw (2).

Swivel the operating module into the desired position and retighten the clamping screw.

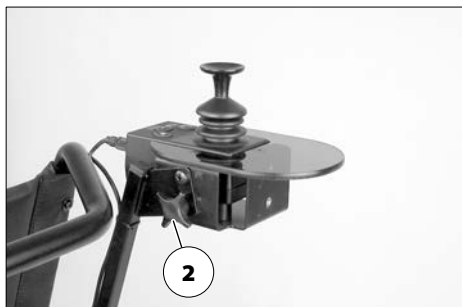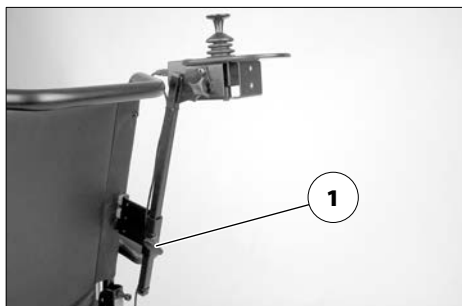

LIGHTING

For driving outdoors and on public roads the electric wheelchair can be fit with LED-lighting equipment.

The lighting is activated over the operating module for the driver.

Note:

Observe the operating manual < *Operating module* > as well as the safety and general handling instructions < *Electric vehicles* >!



REAR-VIEW MIRROR

Removing the rear-view mirror


To remove the rear-view mirror loosen the clamping screw (2) and pull the rear-view mirror forward out of the arm support tube.

Note:

Carefully place the rear-view mirror down and protect the mirror glass from strain or other objects.

-  The rear-view mirror is to be kept clean at all times.

Use common glass cleanser to clean the mirror. In doing so the manufacturers instructions are to be observed.

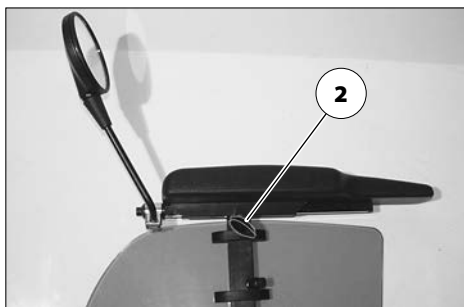

Attaching the rear-view mirror

For drive mode insert the rear-view mirror from the front into the arm support tube and tighten the clamping screw (2).

Adjusting the rear-view mirror

1. Preadjust the rear-view mirror by turning the clasp.
2. Turn the rear-view mirror on the attachment rod and ball joint until you reach the desired angle.

LOADING AND TRANSPORTATION

- ✎ Do not use the back support, leg supports, arm supports or revetments to lift the electric wheelchair!

Attention:

- ! The electric wheelchair must be switched off before lifting!

Loading

The electric wheelchair can be loaded with the aid of ramps or lifting platforms.

✎ Note:

Observe safety and general handling instructions < *Electric vehicles* > chapter < *Ramps and lifting platforms* >.

Transport of people inside a motor vehicle

To determine if your electric wheelchair is approved as a seat for person transport inside a motor vehicle, please look at the type plate of your wheelchair.



✎ Note:

Observe the guideline < *Safety with Meyra-wheelchairs, also during transport in motor vehicles* >! – This document and further information can be accessed on our website < www.meyra.com > in the < *Download Archive* >.

Transport security

The electric wheelchair is only to be secured through the securing points [1] and [2].

- ✎ The anchor positions are marked with a symbol.
- ✎ The procedure for securing the wheelchair can be read in the document < *Safety and general handling instructions electric vehicles* > chapter < *Transport in motor vehicles or with conveyors* >.

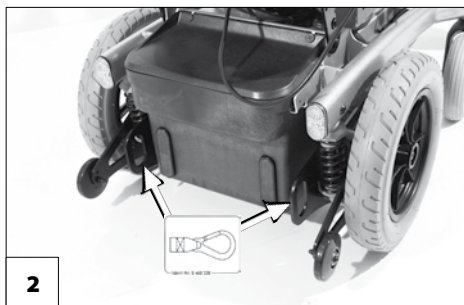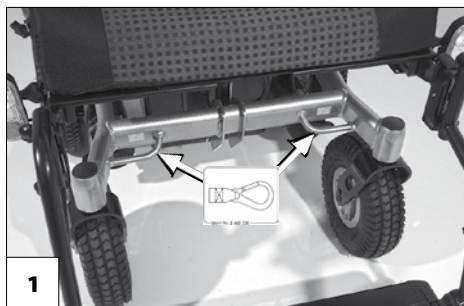

MAINTENANCE

An incorrect or neglected cleaning and maintenance results in a limitation of the product liability.

Maintenance

The following maintenance Instruction gives you a guide for carrying out the maintenance work.

- ✎ They do not give information about the actual extent of work required on the vehicle.

Maintenance schedule

WHEN	WHAT	REMARK
Before starting out	General Test for faultless operation.	Carry out test yourself or with a helper.
	Checking the magnetic brake Move the selection lever for the drive/push mode into the drive mode position on both sides.	Carry out test yourself or with a helper. If the electric wheelchair can be pushed, have the brakes repaired immediately by the specialist workshop. – Danger of accident!
Especially before driving in the dark	Lighting Check the lighting equipment and reflectors for flawless functioning.	Carry out test yourself or with a helper.
Every 2 weeks (depending on distance covered)	Check air pressure of the tyres Tyre filling pressure:  View <i>Technical data</i> on page 46.	Carry out test yourself or with a helper. Use a tyre gauge.
	Adjustment screws Screws and nuts are to be checked for tight fit.	Carry out test yourself or with a helper. Retighten the loosened adjustment screws. Contact specialist workshop upon demand.
Every 6-8 weeks (depending on distance covered)	Wheel attachments Wheel nuts or screws are to be checked for tight fit	Do it yourself or with the aid of a helper. Securely tighten any loosened wheel nuts or screws and retighten again after 10 operating hours or resp. 50 km. Contact specialist workshop upon demand.

WHEN	WHAT	REMARK
Every 2 months (depending on distance covered)	Check tyre profile Minimum tread = 1 mm	Carry out a visual check yourself or with a helper. If the tyre profile is worn down or if the tyre is damaged, consult a specialist workshop for repairs.
Every 6 months (depending on frequency of use)	Check <ul style="list-style-type: none"> – Cleanness. – General condition. 	View < <i>Service</i> > in document < <i>Safety and general handling instructions electric vehicles</i> >. Do it yourself or with the aid of a helper.
Manufacturer recommendation: Every 12 months (depending on frequency of use)	Maintenance jobs <ul style="list-style-type: none"> – Vehicle – Battery charger 	To be carried out by the specialist dealer.

Fuses

Replacing the fuses

Before replacing fuses, park the electric wheelchair on a level surface and secure it from rolling away.

- 📖 Therefore observe chapter *Securing the electric wheelchair* on page 10.

Attention:

- ! Only replace the safety fuse with a safety fuse of the same type!

New fuses can be obtained for example at petrol stations.

Note:



If the safety fuse blows again, take the battery to a specialist dealer for repair.

Fuse

Mains-/battery fuse [1]

The blade fuse for the battery current is plugged inside the fuse holder (2) of the battery case.

- 📖 *Technical data* on page 46 to be observed!

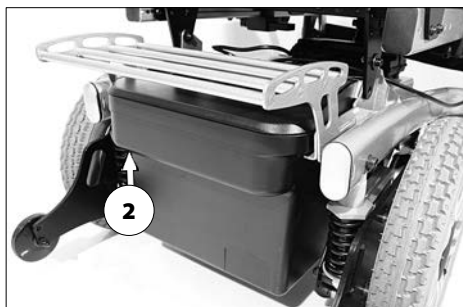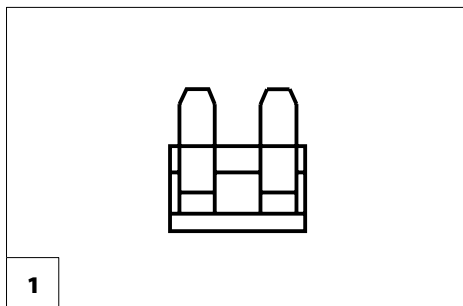


Lighting

The lighting (1)+(2) is equipped with longlife LED-technology.

Note:

If a turn-signal bulb is defective, the remaining one blinks at double frequency.

-  Immediately have a defective LED-lamp repaired by a specialist workshop.




Headlights

The housing of the light (1) must be adjusted so that the light cone is visible on the driving surface. – The lower edge of the light cone should be set at distance of 3 meters to the front of the electric wheelchair.

Note:

The lighting case might need to be re-adjusted after adjustment of the seat inclination.

-  If needed go to a specialist workshop for adjustment.



Fault correction

Fault	Cause	Remedy
Battery indicator on the operating module does not light up after the switch-on.	Battery fuse is defective or not correctly inserted.	Replace defective fuse or clean contacts and insert correctly.
	Plug connection of the power supply without contact.	Check the plug connections.
The battery gauge blinks after the switch-on.	One or both of the drive motors are switched to push mode.	Move the selection lever for the drive/push mode into the drive mode position on both sides.
	Plug connection at one of the drives without contact.	Check the plug connections.
	Malfunction in the electronics.	Have it repaired by the specialist workshop. (Push mode) Selection lever in driving mode position.
	Not listed faults.	View < <i>error diagnostics</i> > in the operating manual for the operating module.
Lighting not active.	LED-lamp defective.	Let it be repaired or replaced by a specialist workshop.
	Lighting fuse or drive electronics defective.	Let it be repaired or replaced by a specialist workshop.

TECHNICAL DATA

Kilometric performance

Kilometric performance depends to a large extent on the following factors:

- battery condition,
- weight of the driver,
- driving speed,
- driving style,
- road surface condition,
- driving conditions,
- ambient temperature.

The nominal values given by us are realistic under the following conditions:

- Ambient temperature of 27 °C.
- 100 % rated drive battery capacity as per the DIN standard.
- new condition of the drive batteries with more than 5 charging cycles.
- Nominal load of 75 kg.
- Without repeated acceleration.
- Level, firm driving surface.

The kilometric performance is greatly reduced by:

- frequent uphill driving,
- insufficient charging condition of the drive batteries,
- low ambient temperature (e.g. in winter)
- frequent acceleration and braking (e.g. in city traffic)
- aged, sulphated drive batteries,
- frequently necessary steering manoeuvres,

- reduced driving speed (especially at walking speed).

In practical use, the kilometric performance under 'normal conditions' is then reduced to approx. 80 % – 40 % of the nominal value.

All data within the following table relates to the standard version of the stated model.

Dimensional tolerance $\pm 15 \text{ mm}$, $\pm 2^\circ$.

Short form of wheelchair dimensions:

SH = Seat height

SW = Seat width

SD = Seat depth

BH = Back support height

Hill climbing ability

Gradients in excess of the permitted values (e.g. ramps) should for safety reasons only be driven when the wheelchair is empty!

Data according to ISO for model 1.614

	min	max
Overall length with leg support	1150 mm	1150 mm
Overall width	670 mm	850 mm
Overall dimensions	84 kg	340 kg
User weight (incl. additional load)	– kg	200 kg
Weight of the heaviest part	– kg	4.5 kg
Actual seat depth	430 mm	600 mm
Actual seat width	530 mm	700 mm
Folding length	– mm	– mm
Folding width	– mm	– mm
Folding height	– mm	– mm
Seat surface height at front edge (without cushion)	460 mm	560 mm
Seat angle (mechanical/electric)	0° / 0°	10° / 18°
Back support angle (mechanical/electric)	-10° / -10°	30° / 50°
Back support belt height	530 mm	570 mm
Foot support to seat (lower shank length)	370 mm	510 mm
Static stability downhill	8.5°	8.5°
Static stability uphill	8.5°	8.5°
Static stability lateral	8.5°	8.5°
Dynamic stability uphill	8.5°	8.5°
Angle leg support - seat surface	110°	180°
Arm support height from seat surface	170 mm	280 mm
Back support to front edge of arm support	330 mm	450 mm
Obstacle height	60 mm	60 mm
Minimal turning radius	950 mm	–
Maximum forward speed (depending on equipment)	6 km/h	10 km/h
Minimum breaking distance from top speed	1000 mm	2100 mm
Energy consumption (with 6 km/h)	– km	30 km
Energy consumption (with 10 km/h)	– km	35 km

Further technical data for model 1.614

	min	max
Sound level	70 dB(A)	
Protection class	IP X4	
Turning area	1400 mm	
Drive controller	24 V / 120 A	
Engine output (6 / 10 km/h)	300 W	350 W
Main fuse	80 A	
Lighting (option)	LED-technology 24 V	
Additional load	– kg	10 kg
Permitted axle load front	– kg	170 kg
Permitted axle load rear	– kg	220 kg
Ground clearance (drive)	60 mm	
Ground clearance (battery tub)	80 mm	
Empty weight (with drive batteries)	130 kg	
Empty weight (without drive batteries)	84 kg	

Transport dimensions

Length (incl. support castors, without leg supports)	850 mm	
Width (without arm supports)	710 mm	760 mm
Height (without arm supports)	650 mm	800 mm

Climatic data

Ambient temperature	-25 °C to +50 °C
Storage temperature with drive batteries	-25 °C to +50 °C
Storage temperature without drive batteries	-40 °C to +65 °C

Steering wheel

260 x 70 mm (10")	pneumatic tyres, max. 2.5 bar (36 psi)
260 x 70 mm (10")	puncture safe

	min	max
<u>Driving wheel</u>		
350 x 75 mm (14 x 3,5")	pneumatic tyres, max. 2.5 bar (36 psi)	
350 x 75 mm (14 x 3,5")	puncture safe	
<u>Drive batteries</u>		
2 x 12 V 63 Ah (5 h) / 73 Ah (20 h)	sealed	
Max. battery dimensions (LxWxH)	260 x 174 x 205 mm	
Charging current		12 A

Values acc. to ISO for model 1.614 XXL Code 3060-3063

	min	max
Overall length with leg support	1150 mm	1150 mm
Overall width	670 mm	920 mm
Overall dimensions	94 kg	390 kg
User weight (incl. additional load)	– kg	250 kg
Weight of the heaviest part	– kg	4.5 kg
Actual seat depth	430 mm	600 mm
Actual seat width	530 mm	770 mm
Folding length	– mm	– mm
Folding width	– mm	– mm
Folding height	– mm	– mm
Seat surface height at front edge (without cushion)	460 mm	560 mm
Seat angle (mechanical/electric)	-10° / 10°	30° / 50°
Back support angle	-10°	50°
Back support belt height	530 mm	570 mm
Foot support to seat (lower shank length)	370 mm	510 mm
Static stability downhill	8.5°	8.5°
Static stability uphill	8.5°	8.5°
Static stability lateral	8.5°	8.5°
Dynamic stability uphill	8.5°	8.5°
Angle leg support - seat surface	110°	180°
Arm support height from seat surface	170 mm	280 mm
Back support to front edge of arm support	330 mm	450 mm
Obstacle height	60 mm	60 mm
Minimal turning radius	950 mm	–
Max. forward top speed		6 km/h
Minimum breaking distance from top speed		1000 mm
Energy consumption	– km	30 km

Further technical data for model 1.614 XXL Code 3060-3063

	min	max
Sound level		70 dB(A)
Protection class	IP X4	
Turning area	1400 mm	
Drive controller		24 V / 120 A
Engine output		350 W
Main fuse	80 A	
Lighting (option)	LED-technology 24 V	
Additional load	– kg	10 kg
Permitted axle load front	– kg	195 kg
Permitted axle load rear	– kg	250 kg
Ground clearance (drive)	60 mm	
Ground clearance (battery tub)	80 mm	
Empty weight (with drive batteries)	140 kg	
Empty weight (without drive batteries)	94 kg	

Transport dimensions

Length (incl. support castors, without leg supports)		850 mm
Width (without arm supports)	720 mm	830 mm
Height (without arm supports)	650 mm	800 mm

Climatic data

Ambient temperature	-25 °C to +50 °C
Storage temperature with drive batteries	-25 °C to +50 °C
Storage temperature without drive batteries	-40 °C to +65 °C

Steering wheel

260 x 70 mm (10")	pneumatic tyres, max. 2.5 bar (36 psi)
260 x 70 mm (10")	puncture safe

	min	max
<u>Driving wheel</u>		
356 x 75 mm (14 x 3,5")	pneumatic tyres, max. 2.5 bar (36 psi)	
356 x 75 mm (14 x 3,5")	puncture safe	
<u>Drive batteries</u>		
2 x 12 V 63 Ah (5 h) / 73 Ah (20 h)	sealed	
Max. battery dimensions (LxWxH)	260 x 174 x 205 mm	
Charging current		12 A

Data according to ISO for model 1.614 with seatlift Code 27

	min	max
Overall length with leg support	1150 mm	1150 mm
Overall width	670 mm	850 mm
Overall dimensions	110 kg	340 kg
User weight (incl. additional load)	– kg	180 kg
Weight of the heaviest part	– kg	4.5 kg
Actual seat depth	430 mm	600 mm
Actual seat width	530 mm	700 mm
Folding length	– mm	– mm
Folding width	– mm	– mm
Folding height	– mm	– mm
Seat surface height at front edge (without cushion)	460 mm	560 mm
Seat angle (mechanical/electric)	0° / 0°	10° / 18°
Back support angle (mechanical/electric)	-10° / -10°	30° / 50°
Back support belt height	530 mm	570 mm
Foot support to seat (lower shank length)	370 mm	510 mm
Static stability downhill	8.5°	8.5°
Static stability uphill	8.5°	8.5°
Static stability lateral	8.5°	8.5°
Dynamic stability uphill	8.5°	8.5°
Angle leg support - seat surface	110°	180°
Arm support height from seat surface	170 mm	280 mm
Back support to front edge of arm support	330 mm	450 mm
Obstacle height	60 mm	60 mm
Minimal turning radius	950 mm	–
Maximum forward speed (depending on equipment)	6 km/h	10 km/h
Minimum breaking distance from top speed	1000 mm	2100 mm
Energy consumption (with 6 km/h)	– km	30 km
Energy consumption (with 10 km/h)	– km	35 km

Further technical data for model 1.614 Code 27

	min	max
Sound level	70 dB(A)	
Protection class	IP X4	
Turning area	1400 mm	
Drive controller	24 V / 120 A	
Engine output (6 / 10 km/h)	300 W	350 W
Main fuse	80 A	
Lighting (option)	LED-technology 24 V	
Additional load	– kg	10 kg
Permitted axle load front	– kg	170 kg
Permitted axle load rear	– kg	220 kg
Ground clearance (drive)	60 mm	
Ground clearance (battery tub)	80 mm	
Empty weight (with drive batteries)	155 kg	
Empty weight (without drive batteries)	110 kg	

Transport dimensions

Length (incl. support castors, without leg supports)	850 mm	
Width (without arm supports)	710 mm	760 mm
Height (without arm supports)	650 mm	800 mm

Climatic data


Ambient temperature	-25 °C to +50 °C
Storage temperature with drive batteries	-25 °C to +50 °C
Storage temperature without drive batteries	-40 °C to +65 °C

Steering wheel

260 x 70 mm (10")	pneumatic tyres, max. 2.5 bar (36 psi)
260 x 70 mm (10")	puncture safe


	min	max
<u>Driving wheel</u>		
356 x 75 mm (14 x 3,5")	pneumatic tyres, max. 2.5 bar (36 psi)	
356 x 75 mm (14 x 3,5")	puncture safe	
<u>Drive batteries</u>		
2 x 12 V 63 Ah (5 h) / 73 Ah (20 h)	sealed	
Max. battery dimensions (LxWxH)	260 x 174 x 205 mm	
Charging current		12 A
<u>Seat lift (lifting height)</u>		
Seat lift (lifting height)	300 mm	
Speed limitation	from about 2 cm lifting height	

 Meaning of the labels on the electric wheelchair



Attention!

Read the operating manuals and other provided documentation.

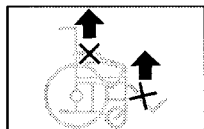

Do not lift the electric wheelchair at the arm supports or leg supports.

Removable parts are not suitable for carrying.



 
Drive mode



Push mode



Push only on level surfaces.




Indication for charging socket



The product is **not** approved as a seat within a motor vehicle.



 Indication for danger of jamming. – Do not reach in here



Attachment possibility of the transport securing system.



Operation in moving transport vehicles. – Switch off or switch to driving program 3.

Meaning of the symbols on the washing instruction

(the symbols correspond to European standard)



Wash as delicates with the indicated maximum temperature in °C



Wash as regular laundry with the indicated maximum temperature in °C



Do not bleach



Not suited for the dryer



Do not iron



Do not dry-clean

Meaning of the symbols on the type plate



Manufacturer



Order number



Serial number




Production date (Year – Calendar week)



Permitted user weight



max. permissible total weight

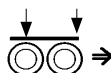

Permitted axle weights



Max. permissible rising gradient



Max. permissible falling gradient

max. ... km/h Permitted maximum speed



The product is approved as a seat within a motor vehicle



The product is **not** approved as a seat within a motor vehicle.

INSPECTION CERTIFICATE

Vehicle data:

Model:

Delivery note no.:

Serial-no.(SN):

Recommended safety inspection 1st year (at least every 12 months)

Stamp of specialist dealer:

Signature: _____

Place, date: _____

Next safety inspection in 12 months

Date: _____

Recommended safety inspection 2nd year (at least every 12 months)

Stamp of specialist dealer:

Signature: _____

Place, date: _____

Next safety inspection in 12 months

Date: _____

Recommended safety inspection 3rd year (at least every 12 months)

Stamp of specialist dealer:

Signature: _____

Place, date: _____

Next safety inspection in 12 months

Date: _____

Recommended safety inspection 4th year (at least every 12 months)

Stamp of specialist dealer:

Signature: _____

Place, date: _____

Next safety inspection in 12 months

Date: _____

Recommended safety inspection 5th year (at least every 12 months)

Stamp of specialist dealer:

Signature: _____

Place, date: _____

Next safety inspection in 12 months

Date: _____

WARRANTY / GUARANTEE

We accept legal liability for this product within the scope of or general terms and conditions and warranty and in certain cases other verbal resp. agreed upon guarantees. For warranty and guarantee demands please contact your specialist dealer with following Warranty/Guarantee section and the there included information on model description, delivery note number with delivery date and serial number (SN).

The serial number (SN) can be read off of the type plate.

Precondition for the acceptance of liability in any case is the intended use of the product, the use of original spare parts by authorised dealers as well as maintenance and inspections in regular intervals.

Guaranty is not granted for surface damages, tyres of the wheels, damages due to loosened screws or nuts as well as worn out attachment holes due to frequent assembly work.

Furthermore, damage to the drive and electronics caused by improper cleaning using steam cleaning equipment or the deliberate or accidental flooding of the components are also excluded.

Interferences through radiation sources such as mobile phones with high transmission power, HiFi-equipment and other extreme interference radiators outside of

norm specifications cannot be declared as warranty or guarantee claims.

Attention:

! Failure to observe the instructions in the operating manual, improperly carried out maintenance work and, especially, technical changes and additions (add-ons) carried out without our prior consent will lead to a general loss of guarantee and product liability.

Note:

This operating manual as a part of the product is to be handed out in case of a change of owner.

We reserve the right to make technical improvements.



The product conforms with the EC Directive 93/42/EEC (MDD) for medical products.

Warranty / Guarantee section

Please fill out! Copy if necessary and send the copy to the specialist dealer.

Warranty / Guarantee

Model designation:

Delivery note no.:

SN (view type plate):

Date of delivery:

Stamp of the specialist dealer:

Inspection certificate for transfer

Vehicle data:

Serial-no.(SN):

Model:

Delivery note no.:

Stamp of specialist dealer:

Signature:

Place, date:

Next safety inspection in 12 months

Date:

Your specialist dealer

MEYRA GmbH



Meyra-Ring 2
D-32689 Kalletal-Kalldorf



Tel +49 5733 922 - 311
Fax +49 5733 922 - 9311



info@meyra.de

www.meyra.de
